

## ■ Standard bathroom



The **shower floor element made of PUR 120 x 120 cm with channel drainage and height-adjustable side panel (Art. No. 1821)** enables a bathroom design with a spacious, floor-level shower area. The tub-like design of the shower floor is absolutely watertight and, with the adjustable side panel, allows it to be adapted to different floor heights.

When it looks good in the bathroom, there often is a Grumbach sanitary product behind it.



With **Grumbach sanitary blocks**, a quick and easy pre-wall installation is possible. The **Grumbach WC-block 100 cm high (Art.-No. 1402.N)** is a model from Grumbach's line of pre-wall installation elements. WC-blocks are available in heights from 78 to 110 cm and different depths. In this example, it is covered with white decorative panels and equipped with the Sigma 20 flush panel from Geberit®.



## ■ Narrow bathroom, width 90 cm




Even a “tubular bath” that is only 90 cm wide can be sensibly designed with the innovative Grumbach sanitary products. With the **shower floor element made of PUR with channel drainage and height-adjustable side panel**, the width of the room is used for a floor-level shower.

The Grumbach **SLIM block in the 15° complete set** ensures an unprecedented, stable and space-saving toilet installation. The **Grumbach wash-basin block** can be reduced to a depth of just 12.5 cm, as shown here, and nestles closely against the wall. A fully-fledged bathroom with a width of only 90 cm!



## ■ Narrow bathroom, width 120 cm

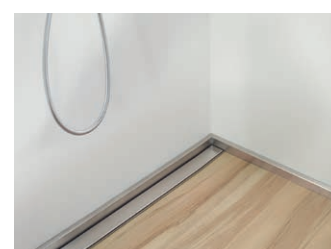

■ For all Grumbach sanitary blocks, see pages 3–37, find the shower floor elements from page 43.

With Grumbach sanitary products, an attractive bathroom design is possible even in tight spaces. In this example of a bathroom that is only about 120 cm wide, a **shower floor element made of PUR 120 x 120 cm with channel drainage and height-adjustable side panel (Art. No. 1821)** is used in conjunction with a **corner WC-block 108 cm high (Art. No. 1301.III)**. Thanks to the space-saving WC installation, there is still enough freedom of movement despite the spacious shower, even in this “tubular bath”.



## ■ Main bathroom an “attic bathroom”



Grumbach sanitary blocks also cut a fine figure in spacious bathrooms. The corner WC-block fits perfectly into the airy appearance. The space-saving toilet installation creates space for bathroom designs as desired.



An unused attic becomes an “oasis”. The available low heights of the **Grumbach corner WC-block** allow installation on the jamb. The spacious, floor-level shower area is realized with the help of the **120 x 120 cm shower floor element made of PUR with channel drainage and height-adjustable side panels**.